


1. To view the current software version, hold down the “Mode” button and power the unit on.

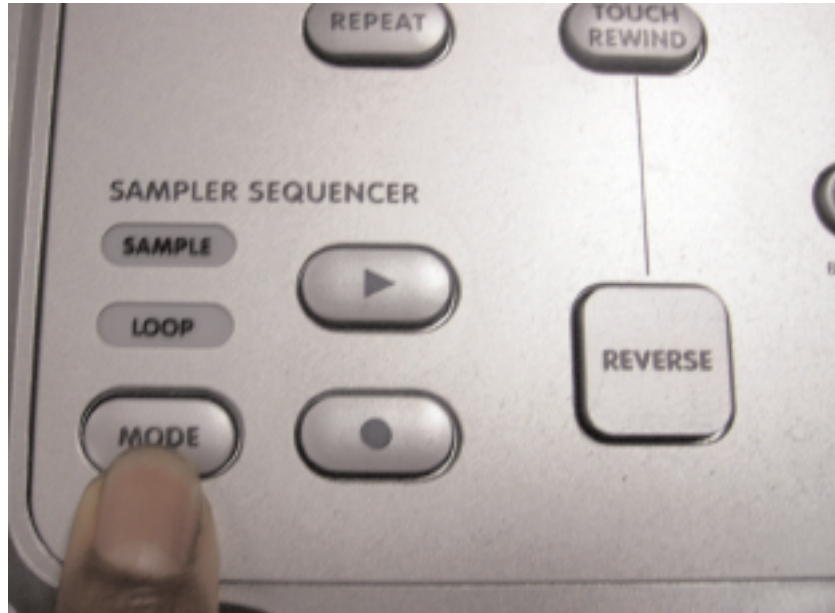


The current software version will be the 7 digit number at the lower part of the display.



2. Insert the disc that contains the ISO Image c314v1121 then close the cd drawer.



3. Next the player will read the disc and begin the update process automatically in two steps.

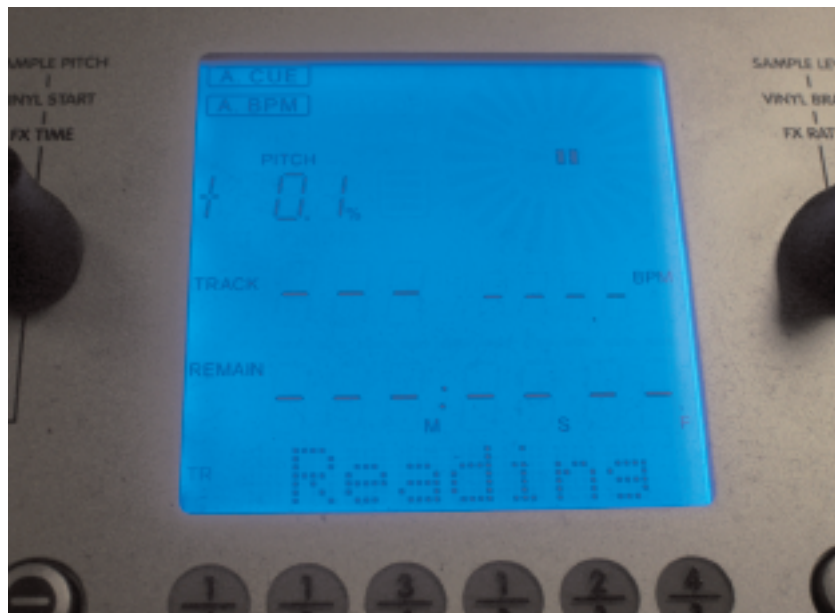

Update process step # 2. The player will flash SUCCESS

Update process step #1 .The player will flash “UPDATE. “



Update process step # 2. The player will flash SUCCESS



During the update the unit will flash Update and Success twice if the firm ware has been updated correctly. In some cases you may get a Failure display if this does happen please wait until the process is completely finished and the disc to eject. Then simply power the unit off then on again and repeat the update steps.

After the update is complete your new software version should read **032 1121**

